

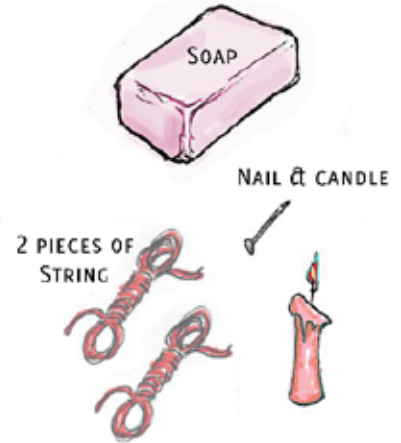


HOW TO BUILD A TIPPY TAP

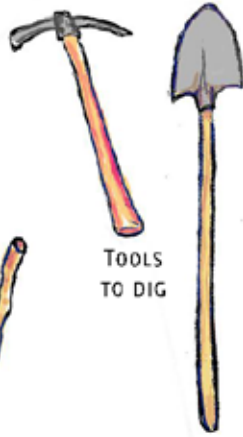

1. DIG TWO HOLES 18IN DEEP AND ABOUT 2FT APART

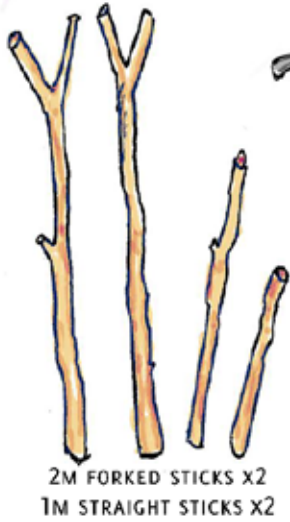


OIL BOTTOM OF STICKS TO PREVENT TERMITES

2. PLACE THE FORKED STICKS, ENSURE THEY ARE LEVEL



3. FILL HOLES WITH SOIL & ROCKS, AND PACK TIGHTLY

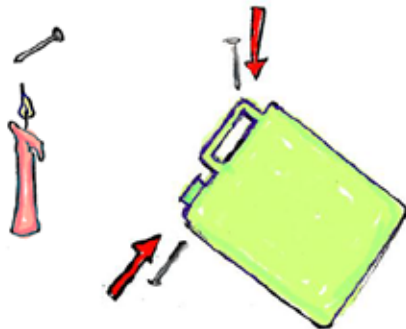


3. HEAT THE NAIL AND MAKE HOLES IN THE WATER CONTAINER



4. MAKE A HOLE IN THE SOAP AND THREAD STRING




5. HANG CONTAINER AND SOAP ON CROSS STICK AND PLACE ON SUPPORTS.

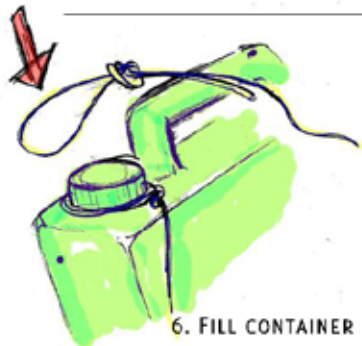

6. FILL CONTAINER WITH WATER AND ATTACH STRING.

7. ATTACH OTHER END OF STRING TO FOOT LEVER STICK

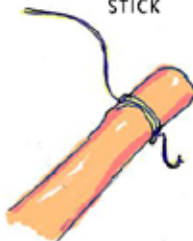

8. MAKE GRAVEL BASIN BETWEEN STICKS TO PREVENT MUDDY AREA